
# KEIHIN TROUBLE SHOOTING GUIDE

FCR (Flat-CR Downdraft) and CR Special Carburetors

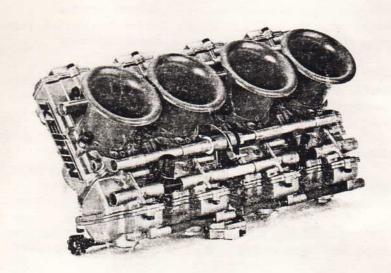

# PROBLEMS AND CORRECTIONS

Carb	cannot	be	mounted	to	engine
------	--------	----	---------	----	--------

assemble with wrong pitch adjust pitch wrong mount adapter replace fuel inlet does not fit.

### Overflow of fuel

### Shortage of fuel flow

# Poor idling or stalling

# Poor running at low speed (under 1/4 throttle opening)

poor acceleration select correct jet
too lean; no power larger size slow jet
use richer jet needle (smaller
straight diameter)
too rich use smaller slow jet size
runs better without air cleaner use leaner jet needle (larger straight dia.)
adjust air screw (option part for FCR)
throttle valve with larger cutaway

# PROBLEMS AND CORRECTIONS

Poor running a	t intermediate spe	eed (above 1/4 throttle ope	ening); hesitation
	clogged main jetcalibration too lean		disassemble and clean
			raise jet needle by lowering number of clip
			use needle jet with higher protrusion (CRS)
			use needle jet with larger recess diameter
			(CRS only)
	too rich		lower jet needle by heightening number of clip use needle jet with lower protrusion (CRS only)
			use needle jet with smaller recess diameter (CRS)
Poor running a	nt high speed (1/2	throttle opening)	
	too lean		use larger main jet
			use richer jet needle (steeper taper)
			replace air funnel for a longer one
	clogged air vent		cleaning required
(hesitation; run	ns worse when wa	rm)	
	too rich		use smaller main jet
Fuel consumpt			
	carb bore too lar	ge	replace with smaller bore
	starter plunger se	eal	replace seal
	calibration		use screen type needle jet (primary nozzle)
			lower jet needle by heightening number of clip use smaller tapered jet needle
Operation of the	hrottle and cable a		Notes and the
		ed or pinched	eliminate problem
		wire of cable	adjust proper play of inner wire
	The state of the s	3	replace
	dusty bearing		disassemble and clean or replace and iubricate
		lve	disassemble and clean or replace
	The state of the s	rottle shaft seized	replace
	return spring for	ce too strong	use softer spring
			shift position of spring (CRS only)
FCR	domaged floating	a valve	replace
FCR	damaged floating valvestiff only at W.O.T		adjust clearance between body and linkarm
rck	still only at W.C	/. 1	aujust cicaratice between body and mikarii

# PROBLEMS AND CORRECTIONS

Operation of enrichener

warped starter lever..... replace clogged starter..... disassemble and clean

Hard starting (cold engine)

lean starter system..... replace starter jet with larger size lean mixture due to opened throttle valve......adjust throttle opening

Hard starting (warm engine)

over use of starter while engine is warm.....turn off starter
over rich starter system.....replace the starter jet with smaller size
shortage of air intake.......adjust throttle valve opening



Carburetor Division
3014 Tanager Avenue
Commerce, California, 90040 USA
(213) 728-5407 Telephone (213) 728-8060 Fax